

Europäisches Patentamt  
European Patent Office  
Office européen des brevets



(11) **EP 1 161 928 A1**

(12) **EUROPEAN PATENT APPLICATION**

(43) Date of publication:  
12.12.2001 Bulletin 2001/50

(51) Int Cl.7: **A61F 13/15, A61F 13/46**

(21) Application number: **01122027.4**

(22) Date of filing: **05.05.1994**

(84) Designated Contracting States:  
**BE CH DE ES FR GB IT LI NL PT SE**

(30) Priority: **12.05.1993 US 58247**

(62) Document number(s) of the earlier application(s) in  
accordance with Art. 76 EPC:  
**94917311.6 / 0 697 846**

(71) Applicant: **KIMBERLY-CLARK WORLDWIDE, INC.**  
**Neenah, Wisconsin 54956 (US)**

(72) Inventors:  
• **Couture-Dorschner, Laurie**  
**Greenville, WI 54942 (US)**  
• **King, David Russell**  
**Neenah, WI 54956 (US)**

• **Nichols, Anne Marie**  
**Appleton, WI 54911 (US)**  
• **Gilman, Thomas Harry**  
**Appleton, WI 54915 (US)**  
• **Finch, Valeria Victoria**  
**Neenah, WI 54956 (US)**

(74) Representative:  
**DIEHL GLAESER HITTL & PARTNER**  
**Patentanwälte**  
**Augustenstrasse 46**  
**80333 München (DE)**


Remarks:

This application was filed on 13 - 09 - 2001 as a  
divisional application to the application mentioned  
under INID code 62.

(54) **Absorbent article**

(57) An absorbent article is disclosed which is  
equipped with tabs having a more comfortable handling  
and giving an improved fit. The absorbent article com-  
prises a liquid permeable cover 12, a liquid impermeable  
baffle 14, an absorbent article 16 positioned between  
said cover and said baffle, said absorbent having a pair

of longitudinally extending side edges 46, 48 and a pair  
of tabs 42, 44 extending outwardly from said longitudinal  
side edges, each of said tabs 42, 44 having a Curley  
stiffness which is less than that of the absorbent. The  
Curley stiffness may be between 50 mg to 150 mg, the  
thickness of the tabs may range from 0.7 mm to 1.5 mm.

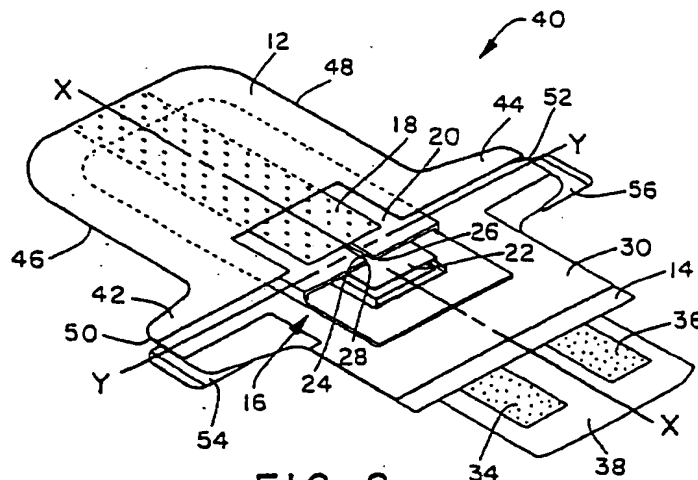

**FIG. 2**

## Description

[0001] This invention relates to an absorbent article for absorbing body fluid especially menses and blood.

[0002] An absorbent article refers to products such as diapers, sanitary napkins, training pants, incontinent garments, overnight pads, panty liners, underarm shields, and the like which are used to absorb body fluid, such as urine, menses, blood, perspiration, and other excrements discharged by a body. Sanitary napkins, also referred to as catamenial pads, feminine pads, overnight pads, panty liners and panty shields are designed to be worn by a female to absorb menses and other body fluids discharged before, during and after a menstrual period. Such products are external devices which are generally held in position by a garment attachment adhesive or by a mechanical attachment to an adjacent undergarment. Such products differ from tampons which are classified as internal devices and which are designed to be physically inserted into a woman's vagina.

[0003] Functionally, sanitary napkins and overnight pads differ from panty liners and panty shields in that they are generally constructed to absorb a greater quantity of body fluid and are designed to be worn for a longer period of time.

[0004] Some pantliners have a pair of tabs which are capable of being folded under the crotch portion of an undergarment. These tabs display a certain stiffness which can conveniently be determined by their Gurley stiffness. Tabs that are in the range of stiffness of some prior art pantliner have been found to suffer from a lack of conformability. They have a tendency to lose their attachment to the undergarment during use in wear conditions. This stiffness range is also not optimum for comfort. For optimum performance and comfort, the tabs should have a Gurley stiffness of less than about 150 mg.

[0005] The vast majority of the prior art tabs or wings have a Gurley stiffness that is less than about 50 mg. This is in line with prior teachings that the more flexible the wings or tabs, the better they will perform (e.g. US. patent 4,608,047, issued to Mattingly). It has been found, however, that prior art made with this teaching in mind suffers from several serious deficiencies. First, when the peel strip is removed from the adhesive, just prior to applying the article to an undergarment, tabs that are too flexible will droop and adhere to the bottom of the absorbent article, or to each other. This is very inconvenient for the user. Second, in use, these highly flexible tabs or wings will have a tendency to bunch and distort. This can be a functional problem, in that the bunched tabs will not do their job of holding the article in place. The bunching is also a comfort problem, in that the wrinkles resulting from bunching are uncomfortable.

[0006] Therefore, it is the object of the present invention to provide tabs which overcome the prior art disadvantages. The object is solved by the absorbent article of independent claim 1. Further advantageous aspects and features of the invention can be derived from the dependent claims, the description and drawings.

[0007] Briefly, this invention relates to an absorbent article having a liquid permeable over, a liquid-impermeable baffle, and absorbent article positioned between said cover and said baffle, said absorbent having a pair of longitudinally extending side edges; and a pair of tabs extending outwardly from said longitudinal side edges, each of said tabs having a Gurley stiffness which is less than that of the absorbent.

[0008] An aspect of this invention is to provide a thin absorbent article having a thickness of less than 15 millimetres and which has a high level of comfort while providing rapid fluid intake.

[0009] Another aspect of this invention is to provide an absorbent article which exhibits enhanced wicking and control of body fluid within the absorbent article.

[0010] Still another aspect of this invention is to provide an absorbent article which has a line of flexure which allows the article to conform and stay in intimate contact with the user's body.

[0011] Other aspects and advantages of the present invention will become more apparent to those skilled in the art in view of the following description and the accompanying drawings.

[0012] Fig. 1 is a cut away, perspective view of an absorbent article, having an absorbent constructed of three members having predetermined wicking capabilities and wherein the third member is positioned within the second member.

[0013] Fig. 2 is a cut away, perspective view of an absorbent article, similar to that shown in Fig. 1 and further including a pair of outwardly extending side tabs according to the invention.

[0014] Fig. 3 is a cut away, perspective view of an absorbent article, having three absorbent members wherein the second member is C-folded about the third member and has a longitudinal gap which faces away from the first member.

[0015] Fig. 4 is a cut away, perspective view of an absorbent article, having three absorbent members wherein the second member is C-folded and has a longitudinal gap which faces the first member and the third member is positioned below the second member.

[0016] Fig. 5 is a cut away, perspective view of an absorbent article, having three absorbent members wherein the wider second member is positioned below both the first and third members.

[0017] Fig. 6 is a cut away, perspective view of an absorbent article, having an absorbent constructed of four separate and distinct members.

[0018] Referring to Fig. 1, an absorbent article 10 suitable for the present invention, is generally shown which is capable of absorbing body fluid. The absorbent article can be a capable of absorbing body fluid. The absorbent article can be a diaper, a training pant, a sanitary napkin, a panty liner, an overnight pad, an incontinent garment, an underarm

shield or any other known disposable product capable of absorbing urine, menses, blood, perspiration, excrement or other fluid discharged by a human body. For purpose of discussion, the absorbent article 10 will be described in terms of a sanitary napkin.

[0019] The absorbent article 10 includes a liquid-permeable cover 12, a liquid-impermeable baffle 14 and an absorbent 16 enclosed therebetween. The liquid-permeable cover 12 is designed to contact the body of the user and can be constructed of a woven or nonwoven material. The cover 12 can be constructed from natural or synthetic materials and should be easily penetrated by body fluid. Suitable materials include bonded carded webs of polyester, polypropylene, polyethylene, nylon or other heat-bondable fibers. Other polyolefins, such as copolymers of polypropylene and polyethylene, linear low-density polyethylene, finely-perforated film webs and net material, also work well. The cover 12 can also be constructed of a thermoplastic film which contains apertures and is flanked on both sides by a nonwoven material. This particular embodiment provides a soft feel against the user's thighs while allowing body fluid to rapidly pass therethrough.

[0020] In order to facilitate movement of body fluid down into the absorbent article 10, one could form a plurality of apertures 13 in the cover 12. The apertures 13 can be randomly or uniformly arranged throughout the cover 12, or they can be located only in a narrow longitudinal band or strip arranged along the longitudinal axis X--X of the absorbent article 10. The apertures 13 permit rapid penetration of the body fluid down into the absorbent 16. The size, shape, diameter and number of apertures can vary to suit one's particular needs.

[0021] The liquid-impermeable baffle 14 is designed to permit the passage of air or vapor out of the absorbent article 10 while blocking the passage of liquids. The baffle 14 can be made from any material having the above-identified properties. A good material is a micro-embossed, polymeric film, such as polyethylene or polypropylene. Bi-component films can also be used. A preferred material is polyethylene film. Most preferably, the baffle 14 will be a polyethylene film having a thickness in the range of about 0.2 to about 2.0 millimeters (mm), preferably about 0.3-1.0 mm.

[0022] The cover 12 and the baffle 14 can be coextensive and in face to face contact around the periphery of the absorbent 16. The cover 12 and the baffle 14 can be sealed together about their peripheries by use of an adhesive, by heat sealing, by ultrasonics, or by any other process known to those in the art.

[0023] The absorbent 16 consists of at least three separate and distinct members 18, 20 and 22, each having a predetermined wicking capability. The first member 18 is positioned immediately below the cover 12 and is aligned along the central longitudinal axis X--X of the absorbent article 10. The first member 18 provides a pre-use visual signal to the user that the body fluid will stay in the center of the absorbent article. The first member 18 can also have a high wicking capability, especially for menses, and can be comprised of a fine pore, highly pigmented fabric. The first member 18 is of a different color, and preferably darker, than the cover 12 and/or the second member 20. Peach, pink or blue offers a good pre-use visual signal that the fluid will stay in the center of the absorbent article 10. The first member 18 can alternatively be a coating or layer of ink deposited on a surface of the cover 12 or on a surface of the second member 20. For the purpose of discussion, the first member 18 will be described as an absorbent member having wicking properties.

[0024] Meltblown works well for the first member 18, for it has excellent menses distribution properties. A description of meltblown is taught in U.S. Patent 4,798,603 issued to Meyer et al, and assigned to the present assignee. This patent is incorporated by reference and made a part hereof.

[0025] The first member 18 can be in the shape of a rectangular strip, having a length equal to or less than the overall length of the absorbent article 10, and a width less than the width of the absorbent article 10. A length of between about 6 to about 12 inches (about 152 to about 304 mm) and a width of between about 0.5 to about 2 inches (about 12 to about 25.4 mm) works well. Preferably, the first member 18 has a length approximately equal to the length of the absorbent article 10, and a width of between about 1 to about 1.5 inches (about 25.4 mm to about 38.1 mm), most preferably about 1.25 inches (about 31.75 mm).

[0026] The first member 18 should be capable of controlling the longitudinal and transverse movement of the body fluid which is delivered to the cover 12. Since the first member 18 is narrower than the absorbent article 10, the sides of the first member 18 are spaced away from the longitudinal side edges of the absorbent article 10, and the body fluid is restricted to the area within the periphery of the first member 18, before it passes down into the second member 20. This design enables the body fluid to be confined to the central area of the absorbent article 10, and to be wicked lengthwise so that a greater quantity of the second member 20 can be utilized.

[0027] In order to facilitate movement of body fluid down into the absorbent article 10, one could form a plurality of apertures 19 in the first member 18. Some or all of the apertures 13 formed in the cover 12 and the apertures 19 formed through the first member 18 can be axially aligned so as to rapidly allow the body fluid to penetrate down into the absorbent 16. The size, shape, diameter and number of apertures 19 can vary to suit one's particular needs. The apertures 19 can be uniformly or randomly arranged throughout all or a portion of the upper surface of the first member 18.

[0028] The second member 20 is positioned below the first member 18 and has a lower wicking capability, especially for menses, than the first member 18 when the first member 18 is an absorbent having wicking properties. The second

member 20 can have a length of between about 6 to about 12 inches (about 152 to about 304 mm). Preferably, the first member 18 has a length approximately equal to the length of the absorbent article 10. The second member 20 can be equal in width to the first member 18 but preferably will be wider. The width of the second member 20 can be between about 2 to about 3 inches (about 50.8 to about 76.2 mm), preferably about 2.5 inches (about 63.5 mm). A width greater than about 3 inches (about 50.8 mm) can cause discomfort to some users.

[0029] The second member 20 can be a hydrophilic material formed from various types of natural or synthetic fibers, including cellulose fibers, surfactant treated meltblown fibers, wood pulp fibers, regenerated cellulose or cotton fibers, or a blend of pulp and other fibers. Preferably, the second member 20 is formed from a material having a large pore structure and exhibits both wet and dry resiliency to ensure comfort and protection. Coform and air-laid fabric are two materials that work well as the second member. Coform is an air-formed blend of meltblown fibers and pulp fibers. The formation of such material is disclosed in U.S. Patent 4,100,324 which issued to Anderson et al. This patent is incorporated by reference and made a part hereof. A coform mixture of about 60 percent cellulose fibers with about 40 percent polypropylene meltblown fibers, works well.

[0030] An air-laid fabric also works well for the second member 20. A commercially available air-laid fabric is Airtex® 395 sold by James River Corporation located at 500 Day St., P.O. Box 23790, Green Bay, Wisconsin 54309-3790. Airtex® 395 is 100% virgin softwood held together by an acrylic binder.

[0031] The second member 20 can also contain thermoplastic polymers which can be permanently deformed by the application of heat and pressure. Such materials include polypropylene, nylon, polyethylene, polyesters, etc. Typical of such materials are bonded carded webs, spunbond fabrics, air-laid fabrics with thermally fusible binder fibers.

[0032] As shown in Fig. 1, the second member 20 is C-folded and has two oppositely aligned, longitudinal edges 24 and 26 which are spaced apart, preferably forming a longitudinal gap or groove 28 therebetween. The C-fold enables the second member 20 to flex thereby allowing the absorbent article 10 to conform and stay in intimate contact with a user's body, approximate the pudendum. It is a known fact, that if an absorbent article can be kept in constant contact with the body, that the likelihood of leakage is greatly minimized. Even though Fig. 1 shows a gap 28, it should be noted that the two edges 24 and 26 can slightly overlap one another or even abut one another, and still accomplish the same function as when they are spaced slightly apart. Preferably, the gap 28 can range between 0 to about .375 inches (about 10 mm).

[0033] When the gap 28 is present, an added feature is provided in that body fluid, present in the first member 18, has a direct route to the third member 22, which is located within the C-folded second member 20. This unobstructive pathway is especially useful when the body fluid is menses, because there is provided a clear path to allow the movement of the viscous fluid from the first member 18 down into the third member 22. A pathway which allows for rapid penetration of the body fluid into the center of the absorbent 16, is highly advantageous in keeping the cover 12 dry and providing for a no leak product.

[0034] The third member 22 is positioned within the C-folded second member 20 and has a higher wicking capability than the second member 20. Preferably, the third member 22 will have a wicking capability, even higher than the first member 18. The third member 22 can consist of one or more layers of tissue, a folded tissue or a meltblown material which exhibits excellent fluid distribution properties. As shown in Fig. 1, an E-folded, wet-laid and through-dried creped tissue works well in that it is easy to manufacture and fold. The tissue can be formed from hardwood and/or softwood fibers. The tissue has a fine pore structure and provides an excellent wicking capability, especially for menses. The third member 22 can have a width approximately equal to, less than or greater than the width of the first member 18. Practically speaking, the third member 22 can have a width ranging from between about .75 to about 2.25 inches (about 19 mm to about 76.2 mm). It should be noted that the third member 22 can have a width equal to the width of the second member 20 if desired. The length of the third member 22 can range from between about 5 to about 12 inches (about 127 mm to about 304 mm). It should be noted that for an article larger than a sanitary napkin, the size of the third member 22 can be proportionally sized. The length of the third member 22, can be equal to or less than the length of the second member 20, preferably slightly less than the second member 20.

[0035] The first absorbent member 18 can serve as a fluid distribution member to allow the body fluid to be distributed in a controlled manner along the length of the absorbent article 10. The second member 20 initially transfers fluid from the first member 18 into the third member 22. The third member 22 then wicks the fluid along its length and width before releasing the fluid to the second member 20. Therefore, the third member 22 can become completely saturated before the fluid is taken up by the second member 20. This action provides a good post-use visual signal to the user that the fluid is staying in the center of the absorbent article 10 thereby reinforcing the pre-use visual signal initially conveyed to the user. The fluid is therefore being wicked uniformly along both the first and third members, 18 and 22 respectively, keeping the fluid in the center of the absorbent article 10. When the user notices that the wider, second member 20 is discolored with body fluid, she knows that it is approaching time to change the absorbent article 10.

[0036] The absorbent article 10 also contains a wet resilient member 30, which is positioned between the second member 20 and the liquid-impermeable baffle 14. The wet resilient member 30 can be a closed cell, polyethylene foam presently commercially sold by Sealed Air Corporation, 7110 Santa Fe Drive, Hodgkins, Illinois 60525. The foam is

sold as Cell-Aire®, CA-30 having a thickness of about 1/32 of an inch (about 0.8 mm), with a density of 1.2 pounds per cubic foot, a width of 60 inches, and on rolls having a linear length of 2000 feet (615 meters). Another polyethylene foam that is also suitable for the wet resilient member 30, is sold by Ametek Microfoam Division, Brandwine Four Building, Routes 1 and 202, Chadds Ford, Pennsylvania 19317.

**[0037]** The wet resilient member 30 serves to resist bunching and twisting of the absorbent article 10 during use. By wet resilient is meant that the member 30 is resilient even when wetted by body fluid. The wet resilient member 30 has a length and a width which can be coterminous with the length and width of the cover 12 and/or the baffle 14. The wet resilient member 30 should have a width equal to or greater than the width of the absorbent 16 and a length equal to or greater than the length of the absorbent 16. The wet resilient member 30 resists bunching and twisting of the absorbent article 10 and therefore cooperates with the gap 28 in keeping the absorbent article 10 in intimate contact with the user's body.

**[0038]** Physically attached to an exterior surface 32 of the baffle 14, are two longitudinally extending strips of garment attachment adhesive 34 and 36. It should be noted that one wide strip, three or more narrow strips, or a spray pattern of adhesive can also be used. The garment attachment adhesive is commercially available from National Starch and Chemical Company, located at 10 FINDERNE AVE., BRIDGEWATER, NEW JERSEY 08807. The garment adhesive strips 34 and 36 are used to secure the absorbent article 10 to the inside of the crotch portion of an undergarment, when the absorbent article 10 is a catamenial product. If the absorbent article 10 is a diaper or a training pant, the garment adhesive strip 34 and 36 may not be needed. The garment adhesive strips 34 and 36 serve to properly align the absorbent article 10 over the vaginal opening.

**[0039]** A releasable peel strip 38 is attached to the garment adhesive strips 34 and 36 and serves to prevent the adhesive from becoming contaminated prior to attachment to an undergarment. The peel strip 38 can be a white Kraft paper, coated on one side, so that it can be released from a hot melt adhesive, such as the garment adhesive strips 34 and 36. The peel strip 38 is designed to be removed ultimately by the consumer just prior to placement of the absorbent article 10 in the undergarment.

**[0040]** Tests were conducted to determine the wicking capabilities of the various materials of different absorbent articles, specifically sanitary napkins. The test procedure determined the wicking capability of the various materials using a dye solution which was dispensed at a flow rate of  $3 \pm .5$  milliliters (ml)/30 seconds. Measurements were taken at two different times, at 30 seconds to establish an initial insult and at 5 minutes after initial insult. The equipment and materials needed for the test are as follows:

1. an automated pump capable of dispensing  $3 \pm .5$  ml in 30 seconds. An automated Cole Parmer-Masterflex® pump, available from Cole-Parmer Instrument Company, Chicago, Illinois 60648 works well;
2. a 1,000 ml capacity Pyrex graduate with 10 ml graduation;
3. a ring stand - 15 inches (381 mm) high;
4. a needle, having a 1/8 inch (3 mm) tip, mounted to the ring stand;
5. Masterflex Tygon tubing, #14, available from Cole-Parmer Instrument Company;
6. 40 ml of a dye solution formed from mixing 16.7 grams of blue dye, No. 1 powder, available from the Warner-Jenkinson Division of Universal Foods Corporation located at 2526 Baldwin Street, P O Box 14538, St. Louis, MO 63178-4533, which has been mixed with 1,000 ml of distilled water;
7. 900 ml of distilled water;
8. a stopwatch, readable to 0.1 second; and
9. a metric ruler.

**[0041]** Before starting the test, 40 ml of the dye solution is gently swirled with 900 ml of distilled water in the 1000 ml capacity pyrex graduate.

**[0042]** The samples to be tested should be conditioned as follows: first, each sample should be removed from a protective package, if the sample is retained in a package. Each sample should then be held at a temperature of  $73^{\circ}\text{F} \pm 1^{\circ}\text{F}$  and at a relative humidity of  $50\% \pm 2\%$  for at least 2 hours. After being conditioned, a 2 by 6 inch (52 mm x 152 mm) specimen is cut from the center of each sample. The longer dimension corresponds to the length of the article from which it is cut.

**[0043]** The test procedure for each specimen is as follows: each 2 by 6 inch specimen is laid on a table with it's body side surface facing up. The tip of the needle is centered over the specimen. The switch which controls the flow of the dye solution from the pump is turned on to allow the dye solution to flow onto the center of the specimen. The stopwatch is started as soon as the dye solution drips onto the specimen. At 30 seconds, the switch to the pump is turned off and the stopwatch is simultaneously stopped. This time period represents what is referred to in the Tables as the "initial insult" and the amount of fluid dispensed should be 3 ml. As quickly as possible, the cover is removed from the specimen. The length and width of the fluid stain on the first and second members, and each additional member if one is present, is measured with the metric ruler. Each member is carefully peeled apart from the adjacent member in order to measure

the fluid stain. This measurement is denoted and recorded and represents the initial insult of the dye solution. All of the members and the cover are then returned to their original position and the stopwatch is started. Five minutes thereafter the stopwatch is stopped. As quickly as possible, the cover is removed from the specimen. The length and width of the fluid stain on the absorbent members, as described above, are measured and recorded. These measurements are denoted and recorded as the "5 minute after insult" reading. This is the final measurement.

[0044] The data appearing in Table 1 below was obtained using the above described test procedure. Four commercially available sanitary napkins were tested along with two prototypes of the present invention. The two prototypes are labelled as Prototypes 1 and 2. One can see from the data that after 5 minutes from initial insult, the length of the fluid stain in either the first or the third absorbent members, 18 and 22 respectively, for Prototypes 1 and 2 (110 mm, 129 mm and 110 mm, 115 mm) were much longer than the fluid stain length of any member of the commercial products. The highest value for any of the commercially tested products was 95 mm, see (KUT 2nd member). The first and third absorbent members (18 and 22, respectively) in Prototypes 1 and 2 clearly had a higher wicking capability than the second absorbent member 20.

TABLE 1  
WICKING CAPABILITY  
(n=1)  
(all measurements in mm)

Product	Absorbent Member	Composite Size w x l	Sq. Area	stain width after 3 ml Insult	stain length after 3 ml Insult	stain width 5 minutes after Insult	stain length 5 minutes after Insult
AUM	1-top member 2-inner member	52 x 152 52 x 152	7904 7904	45 52	45 60	50 52	50 70
SFUP	1-top member 2-5ph member	52 x 152 52 x 152	7904 7904	54 54	55 62	54 54	60 66
PROTOTYPE 1	1-Meltblown 2-Airtex® 3-Tissue	32 x 152 52 x 152 41 x 152	4864 7904 6232	32 47 41	63 60 98	32 49 41	110 65 129
PROTOTYPE 2	1-Meltblown 2-Coform 3-Tissue	32 x 152 52 x 152 41 x 152	4862 7904 6232	32 41 41	70 50 79	32 50 41	110 55 115
KUI	1-Mod. Meltblown 2-Tissue 3-Inner member	32 x 152 52 x 152 32 x 152	4844 7904 4864	32 52 32	55 70 50	32 52 32	55 95 52
MF Maxi	1-Meltblown 2-Fluff 3-Emb. fluff	52 x 152 52 x 152 52 x 152	7904 7904 7904	32 22 30	38 24 32	32 25 40	40 30 60

Note: Some swelling occurred in some of the composite members resulting in stain sizes slightly larger than the cut size.

Products  
AUM Always Ultra Maxi - commercial product sold by Procter & Gamble Company  
SFUP Stayfree Ultra Plus - commercial product sold by Johnson & Johnson  
PROTOTYPE 1 Ultra Thin prototype (figure 1)  
PROTOTYPE 2 Ultra Thin Prototype - same as Prototype 1 except Coform replaces Airtex  
KUI Kotex Ultra Thin - commercial product sold by Kimberly-Clark Corporation  
MF Maxi New Freedom Maxi - commercial product sold by Kimberly-Clark Corporation

Abbreviations:**[0045]**

- 5 Top Member = Top member above inner member  
 Inner Member = Wrapper containing superabsorbent material  
 Sph Member = An absorbent member containing Sphagnum  
 Airtex® = Airtex® 395 mfg. by James River Corporation  
 Tissue = Saint Catherine's tissue 32 gsm. mfg. by Kimberly-Clark Corporation  
 10 Coform = 60% polypropylene polymer blended with 40% pulp, 100 gsm., mfg. by Kimberly-Clark Corporation  
 Mod MB = Modified meltblown 60 gsm., macro pores mfg. by Kimberly-Clark Corporation  
 MB = Standard meltblown 60 gsm., micro pores mfg. by Kimberly-Clark Corporation  
 Fluff = Weyerhaeuser roll fluff pulp, NF 105.  
 15 Emb. Fluff = Fluff that has an embossing pattern formed thereon.

15 **[0046]** Table 2 below shows the ratios of fluid stain length of two adjacent absorbent members in a sanitary napkin for the four commercial products and the two prototypes identified in Table 1. The ratio was determined by dividing the length of the fluid stain in the absorbent member having the higher wicking capability by the length of the fluid stain in the absorbent member having the lower wicking capability. When the product contained three absorbent members  
 20 (see Prototypes 1 and 2, KUT, and NF Maxi), the length of the fluid stain for each of the two absorbent members having the higher wicking capability was divided by the length of the fluid stain in the absorbent member having the lowest wicking capability.

25 **[0047]** The ratios in Table 2 show that the stain length ratios 5 minutes after initial insult were 1.7, 2.0 and 2.0, 2.1, for Prototypes 1 and 2, respectively. These values are a representation of the relationship of the wicking capability of the higher wicking members to the lowest wicking member. A larger value indicates that the difference of wicking is more pronounced between the members. Another way of stating this is to say that the two higher wicking members have a wicking capability which is significantly greater than the wicking capability of the lowest wicking member. This feature enables the higher wicking members to wick the body fluid much more efficiently than the lowest wicking member.

30 **[0048]** One will notice that in Table 2, the commercial products contained ratios between 1.1 and 2.0. The KUT commercial product, which has a ratio greater than 1.7, has a lowest wicking member which is narrower than the higher wicking members. This could lead to premature side leakage. The NF Maxi product, also has a ratio greater than 1.7.

TABLE 2

STAIN LENGTH RATIOS (n=1)			
Product	Ratio of Member	stain length ratio after 3 ml insult	stain length ratio 5 min. after insult
AUM	Member (2): Member (1)	1.3	1.4
SFUP	Member (2): Member (1)	1.1	1.1
PROTOTYPE 1	Member (1): Member (2)	1.4	1.7
	Member (3): Member (2)	1.6	2.0
PROTOTYPE 2	Member (1): Member (2)	1.4	2.0
	Member (3): Member (2)	1.6	2.1
CUT	Member (1): Member (3)	1.1	1.1
	Member (2): Member (3)	1.4	1.8
NF Maxi	Member (1): Member (2)	1.6	1.3
	Member (3): Member (2)	1.3	2.0

**[0049]** In Table 3, the wicking capability in terms of fluid stain length of the four commercial products and the two prototypes described in Tables 1 and 2 are given. The fluid stain length after the initial "3 ml" insult (at 30 seconds)



and "5 minutes after initial insult" are listed. The values in the right hand column, "Stain length 5 minutes after insult", show that for the two prototypes, the fluid stain has progressed more than 76 mm (110 mm, 129 mm, and 110 mm, 115 mm respectively). In fact, the fluid stain length in the high wicking member exceeded 99 mm for both prototypes. In the commercial products, the fluid stain length was 70 mm or below in every product except KUT which measured 95 mm. These fluid stain lengths further support the fact that the first and third absorbent members have a greater wicking capability than the second member. The combination of ratio of fluid stain length of the highest wicking members divided by the fluid stain length of the lowest wicking member being greater than 1.7 along with the fluid stain being at least 76 mm, and preferably at least 99 mm, produces an unexpected result that enables the present invention to function much better than any of the tested products. It should be noted that the time period to determine the stain lengths is at 5 minutes after initial insult of 3 ml. The NF Maxi commercial product has a fluid stain length of 60 mm in the highest wicking member, well below 76 mm. Therefore, even though the wicking ratio is fairly high, the fluid stain length of the high wicking member is relatively showing that the fluid is not well distributed along the highest wicking member.

TABLE 3

WICKING CAPABILITY - STAIN LENGTH Stain Length on Absorbent Members (n=1) (all measurements in mm)			
Product	Absorbent Member	stain length after 3 ml insult	stain length 5 min. after insult
AUM	1st member	45	50
	2nd member	60	70
SFUP	1st member	55	60
	2nd member	62	66
PROTOTYPE 1	1st member	83	110
	2nd member	60	65
	3rd member	98	129
PROTOTYPE 2	1st member	70	110
	2nd member	50	55
	3rd member	79	115
KUT	1st member	55	55
	2nd member	70	95
	3rd member	50	52
NF Maxi	1st member	38	40
	2nd member	24	30
	3rd member	32	60

Referring to Fig. 2, an absorbent article 40, according to the invention is shown which is similar to that depicted in Fig. 1 except that it contains a pair of tabs 42 and 44 which are capable of being folded under the crotch portion of an undergarment. Each tab, 42 and 44 respectively, extends outward from a longitudinal side edge, 46 and 48 respectively, of the absorbent article 40. The tabs 42 and 44 can have any desired configuration, but a rectangular or trapezoidal configuration works well. When a trapezoidal shape is used, the sides of the tabs 42 and 44 can taper inward as they progress toward a distal end, 50 and 52 respectively, at an angle of about 1 degree to about 25 degrees. A preferred angle is about 12 degrees. The taper is measured relative to a central transverse axis Y--Y of the absorbent article 40. [0050] The tabs 42 and 44 can have a surface area of about 1.2 in.<sup>2</sup> (7.7 cm<sup>2</sup>). The tabs 42 and 44 have a length measured parallel to the longitudinal axis X--X of the absorbent article 40, and a width, measured parallel to the transverse axis Y--Y of the absorbent article 40. The length of each tab 42 and 44 can be measured from the center of a radius, formed on one side of the tab to the center of a radius formed on an opposite side of the tab. The radii join the sides of the tabs 42 and 44 to the longitudinal side edges 46 and 48 of the absorbent article 40. The length of each tab 42 and 44 should be between about 0.75 to about 2.0 inches (about 19 mm to about 51 mm), preferably about 1.5 inches (about 38 mm). The width of each tab 42 and 44 can be between about 0.5 to about 1.5 inches (about 13 mm to about 38 mm), preferably about 1 inch (about 25.4 mm).

[0051] It should be noted that the size, shape and thickness of the tabs 42 and 44 can vary depending upon the size and configuration of the absorbent article they are attached to.

[0052] The tabs 42 and 44 are constructed of the cover 12, the baffle 14 and the wet resilient member 30. Therefore, the tabs 42 and 44 are thinner and have a Gurley stiffness which is less than that of the absorbent 16. Each tab 42 and 44 also contains a patch or strip of garment adhesive (not shown) attached to the baffle side of each tab 42 and 44 which is covered by a releasable peel strip, 54 and 56 respectively. The garment adhesive should cover an area of at least 0.5 square inches (about 323 mm<sup>2</sup>) of each tab 42 and 44, and preferably, at least 50% of each tab 42 and 44. The particular shape and configuration of the adhesive can vary. A garment adhesive which works well is adhesive NS 34-5516 which is commercially available from National Starch Company, located at 10 Finderne Ave., Bridgewater, New Jersey 08807.

[0053] The tabs 42 and 44 should have a Gurley stiffness in the range of between about 50 milligrams (mg) to about 150 mg, preferably about 77 mg to about 115 mg when the peel strip is removed to provide optimum comfort and drapability. For the range of about 50 mg to about 150 mg of stiffness, the tabs 42 and 44 should have a thickness of greater than about 0.5 mm, preferably about 0.7 mm to about 1.5 mm, and most preferably about 1.1 mm to about 1.2 mm when the peel strip is removed, see values for Prototype 1 in Table 4.

#### GURLEY STIFFNESS

[0054] To test the Gurley stiffness of a tab on an absorbent article containing a peel strip, one should use a Gurley Digital Stiffness Tester, Model 4171-d. Five samples of each article should be tested. At least one tab on each article must be tested. The articles are removed from any pouch that they may be contained in and are unfolded. The articles are then conditioned by holding them at a temperature of 73°F ± 1° and at a relative humidity of 50% ± 2% for at least 2 hours before testing. A 12.7 mm x 25.4 mm sample is then cut from the center of one tab per article. It should be noted that if the article contains a single peel strip on only one tab, then the tab without the peel strip should be used for this portion of the test. It is also important to avoid testing those areas of a tab which contain Velcro® or other types of hook and loop fasteners. The articles should be carefully handled to avoid affecting the stiffness of the sample.

[0055] The Gurley stiffness tester should be calibrated before use. One should follow the instruction manual of the Gurley stiffness tester and stay within 5% variation using a 50.8 mm wide by 25.4 mm long pre-calibrated Brass Calibration Strip. This is done to ensure that the "Vane" pendulum is swinging according to specification against a known material (i.e. a brass strip). The electronics of the tester should be calibrated as stated in the instruction manual. In setting up the Gurley stiffness tester, one will have to attach the required weight and adjust the leveling screw, until the level's bubble is centered and the pendulum's pointer is indicating zero. The switches should be set for specified weight, specified weight position, width (0.5 inches) and length (1 inch). The test procedure involves the following steps:

- 1) The sample is centered over the pendulum such that exactly 6.4 mm (0.25 inches) overlaps the top of the pendulum and exactly 6.4 mm (0.25 inches) will be held in the jaws.
- 2) The reading should be checked to make sure it is between 2 and 6 on the scale. If not, adjust the weight and reset the switch as needed. The sample should be positioned in close contact with the pendulum vane before applying a force. This will avoid oscillation in the early stages.
- 3) The System Reset button is then pressed. The display must read 00- 000.
- 4) The operator will then press the motor-direction switch to cause the clamp arm to press the sample against the pendulum.
- 5) Step 4 is repeated in the opposite direction to establish both a left scale reading, a right scale reading and an average reading.
- 6) The average scale reading is then recorded.
- 7) The select button is then pressed to attain milligram calculation and record the value.
- 8) Steps 1-7 are repeated for each sample.

#### TAB THICKNESS

[0056] To test for the thickness of a tab on an absorbent article after any peel strip is removed, one would use an Ames Bulk Tester with a dial indicator, Model No. 482. At least one tab on each article must be tested. Five samples of each article should be tested. The articles are removed from any pouch that they may be contained in and are unfolded. The articles are then conditioned by holding them at a temperature of 73°F ± 1° and at a relative humidity of 50% ± 2% for at least 2 hours before testing. The center of the non-adhesive side of each tab is then marked using a marker and a ruler. The comparator gauge on the Ames Bulk Tester is zeroed. An 80.0 grams stainless steel weight is placed on the spindle extending above the comparator dial. The circular aluminum comparator foot (having a contact surface of 5.16 cm<sup>2</sup> and having a weight of 10 g) on the Ames Bulk Tester is then moved to its upper limit and a sample

is placed on the base of the tester with the garment adhesives facing down. This position allows the foot of the tester to be lower onto the center of the tab. The lever on the tester is then gently released to lower the comparator foot onto the sample. The dial is read 30 seconds after the foot comes in contact with the material of which the tab is constructed. The measurement is recorded in inches, as indicated on the dial. The measurement can be converted to millimeters by multiplying the value by 25.4. The number should be recorded to two places to the right of the decimal point. The foot is then raised and the sample is removed so that subsequent samples can be tested. It is important that the base of the tester be cleaned after each sample.

[0057] To test tabs without the peel strip, the peel strip is removed from the tab and the garment adhesive is dusted with talc or corn starch.

[0058] Measurements on the present absorbent article 10 and commercially available sanitary products were made using the above-identified test procedures for Gurley stiffness and thickness. Five samples of each product were tested using one tab from each product. The data is summarized in Table 4 below.

TABLE 4

PRODUCT	TAB GURLEY STIFFNESS (mg) without peel	TAB THICKNESS (mm) without peel
Prototype 1	77-115	1.1-1.2
Kotex® Lightdays® WrapAround™ Pantliner	177-300	1.7-1.9
Libresse®	9- 20	.03-.36
Always® Ultra Plus	3- 13	.02-.51
Always® Plus Long Thin Maxi Pad with Wings	0- 14	.02-.51
Stay Free® Ultra Plus Maxi	.5- 1.9	.33-.38
Kao Night Safe	3- 11	.20-.25

The data indicates that the inventive tabs 42 and 44 have a Gurley stiffness which falls within a unique range, higher than the Gurley stiffness of most of the prior art products, and lower than the Gurley stiffness of the WrapAround® pantliner. This unique range of Gurley stiffness has been found to be the most suitable for the function of the tabs. Tabs that are in the range of stiffness of the WrapAround® pantliner have been found to suffer from a lack of conformability. They have a tendency to lose their attachment to the undergarment during use in wear conditions. This stiffness range is also not optimum for comfort. For optimum performance and comfort, the tabs should have a Gurley stiffness of less than about 150 mg.

[0059] The vast majority of the prior art tabs or wings have a Gurley stiffness that is less than about 50 mg. In fact, those tested in Table 4 have a Gurley stiffness of less than 20 mg. This is in line with prior teachings that the more flexible the wings or tabs, the better they will perform (e.g. U.S. patent 4,608,047, issued to Mattingly). It has been found, however, that prior art made with this teaching in mind suffers from several serious deficiencies. First, when the peel strip is removed from the adhesive, just prior to applying the article to an undergarment, tabs that are too flexible will droop and adhere to the bottom of the absorbent article, or to each other. This is very inconvenient for the user. Second, in use, these highly flexible tabs or wings will have a tendency to bunch and distort. This can be a functional problem, in that the bunched tabs will not do their job of holding the article in place. The bunching is also a comfort

problem, in that the wrinkles resulting from bunching are uncomfortable.

[0060] It has been found that when the tabs have a Gurley stiffness of about 50 mg or above they are sufficiently stiff that they do not stick to the absorbent article upon removal of the peel strip. Furthermore, the tabs exhibit greatly improved resistance to in use bunching relative to prior art tabs that are more flexible.

[0061] It is important when using tabs that have a Gurley stiffness greater than about 50mg that the tabs also, preferably, have a thickness greater than about 0.5 mm. This will insure that the tabs are comfortable. Tabs stiffer than about 50 mg and thinner than about 0.5 mm will present a side edge that can feel sharp to the user, and therefore can cause discomfort.

[0062] Referring to Fig. 3, an absorbent article 58 is shown which is similar to that depicted in Fig. 2, except that the second member 20 is C-folded such that the gap or groove 28 faces downward towards the baffle 14. Such an embodiment may be easier to manufacture on some equipment.

[0063] Referring to Fig. 4, an absorbent article 60 is shown which is similar to that depicted in Fig. 2 except that the third member 22 is positioned below the second member 20. In this arrangement, it is possible to make both the second and third members, 20 and 22 respectively, of the same width. By positioning the third member 22 below the second member 20 instead of within the C-fold, the absorbent article 60 may be easier to manufacture.

[0064] Referring to Fig. 5, an absorbent article 62 is shown which is similar to that depicted in Fig. 2, except that the third member 22 is positioned above the second member 20. In this arrangement, it is possible to make both the second and third members, 20 and 22 respectively, of the same width. By positioning the third member 22 above the second member 20 instead of within the C-fold, the absorbent article 60 may be easier to manufacture.

[0065] Referring to Fig. 6, an absorbent article 64 is shown which is similar to that depicted in Fig. 2, except that the second member 20 is not C-folded but instead consist of two separate members 66 and 68. The member 66 is positioned above the third member 22 while the member 68 is positioned below the third member 22. In this embodiment, the members 66 and 68 would be made out of the same material and would have the same wicking capability. However, if one desired to change the material or wicking properties of the member 68, this could easily be done. The gap or groove 28 would still be present in the member 66 to facilitate movement of body fluid downward into the third member 22. The gap 28 can be formed by constructing the member 66 out of two separate strips of material and laying them parallel to one another and slightly spaced apart. Another way to obtain the gap 28 is to form a slit in the member 66 only along a portion of its length. The gap 28 should be in alignment with the longitudinal central axis X-X of the absorbent article 64.

[0066] While the invention has been described in conjunction with several specific embodiments, it is to be understood that many alternatives, modifications and variations will be apparent to those skilled in the art in light of the foregoing description. Accordingly, this invention is intended to embrace all such alternatives, modifications and variations which fall within the scope of the appended claims.

## Claims

1. An absorbent article comprising:

a) a liquid permeable cover (12);

b) a liquid-impermeable baffle (14);

c) an absorbent (16) positioned between said cover (12) and said baffle (14), said absorbent having a pair of longitudinally extending side edges (46, 48); and

d) a pair of tabs (42, 44) extending outwardly from said longitudinal side edges, each of said tabs (42, 44) having a Gurley stiffness which is less than that of the absorbent.



2. The absorbent article of claim 1 wherein each of said tabs (42, 44) has a Gurley stiffness of between about 50 mg to about 150 mg.



3. The absorbent article of claims 1 or 2, wherein each of said tabs(42, 44) has a Gurley stiffness of between about 50 mg to about 150 mg.

4. The absorbent article of any of the preceding claims wherein each of said tabs (42, 44) has a Gurley stiffness of 77 to 115 mg.

**EP 1 161 928 A1**

5. The absorbent article of any of the preceding claims wherein each of said tabs, has a thickness of 0.7 mm to 1.5 mm.
6. The absorbent article of any of the preceding claims wherein each of said tabs (42, 44) has a thickness of 1.1 mm to 1.2 mm.
- 5 7. The absorbent article of any of the preceding claims wherein each of said tabs (42, 44) has a length of 19 mm to 51 mm.
- 10 8. The absorbent article of any of the preceding claims wherein each of said tabs (42, 44), has a width of 13 mm to 38 mm.
9. The absorbent article of any of the preceding claims wherein each of said tabs (42, 44) contains an adhesive.
- 15 10. The absorbent article according to claim 9 wherein the adhesive covers an area of at least 50% of each of said tabs.
11. An absorbent article according to any of the preceding claims comprising first (18) second (20) and third (22) members, each having a wicking capability and each having a pre-determined width, said first member having a higher wicking capability, said second member having a lower wicking capability than said first member, and said third member having a high wicking capability than said second member, said second member having a width approximately equal to the width of said third member, and said second member having a basis weight of less than about 300 g/m<sup>2</sup>.
- 20 12. The absorbent article of claim 11, wherein said first (18) and third (22) members have essentially the same width.
- 25 13. The absorbent article of claim 11, wherein said third member (22) has a width greater than said first member.

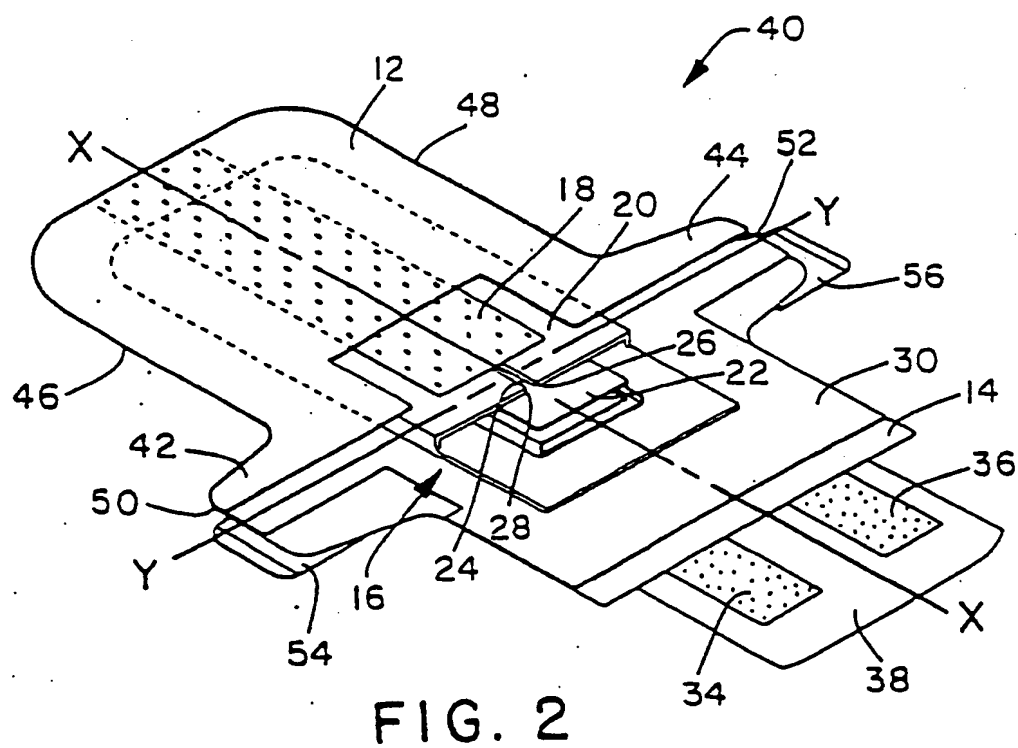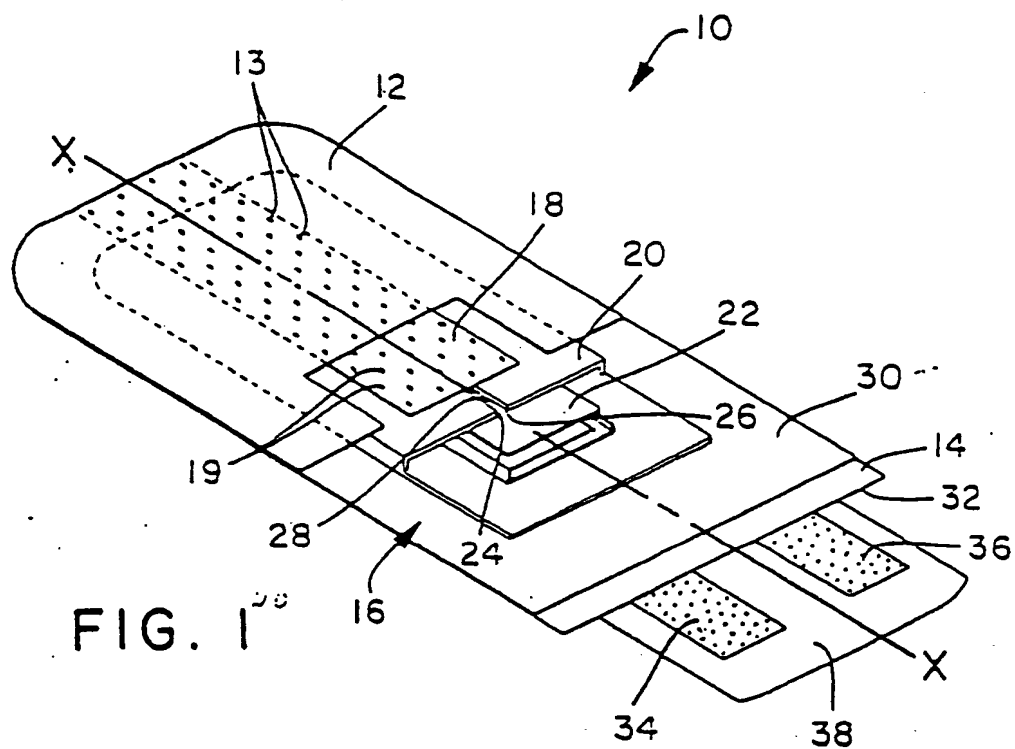

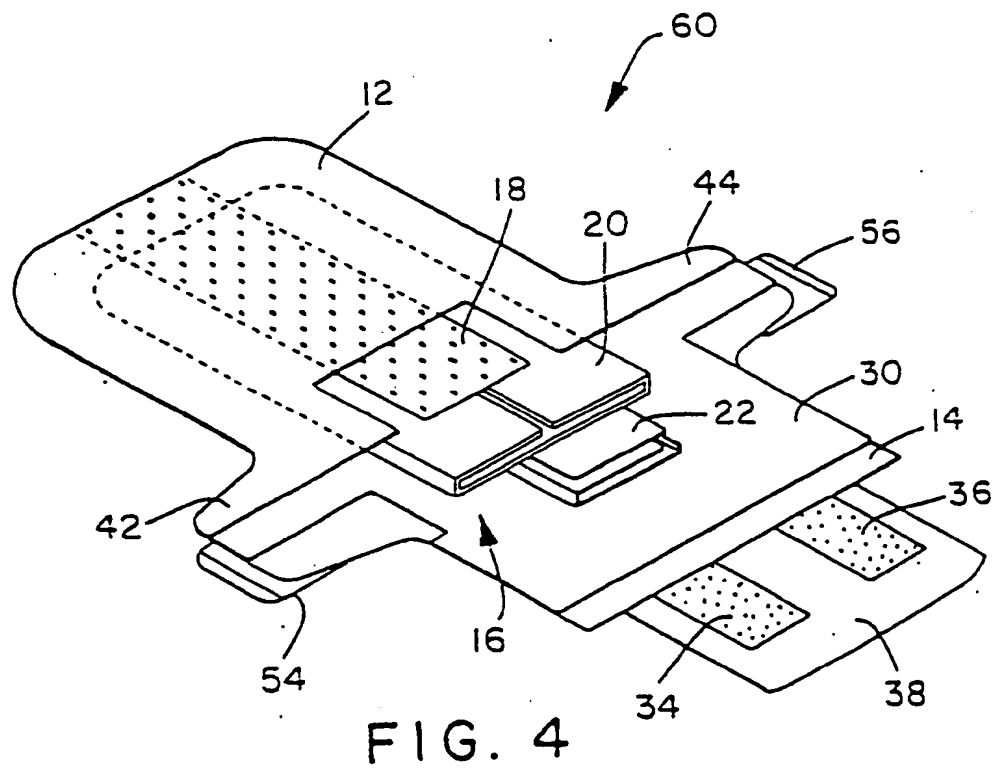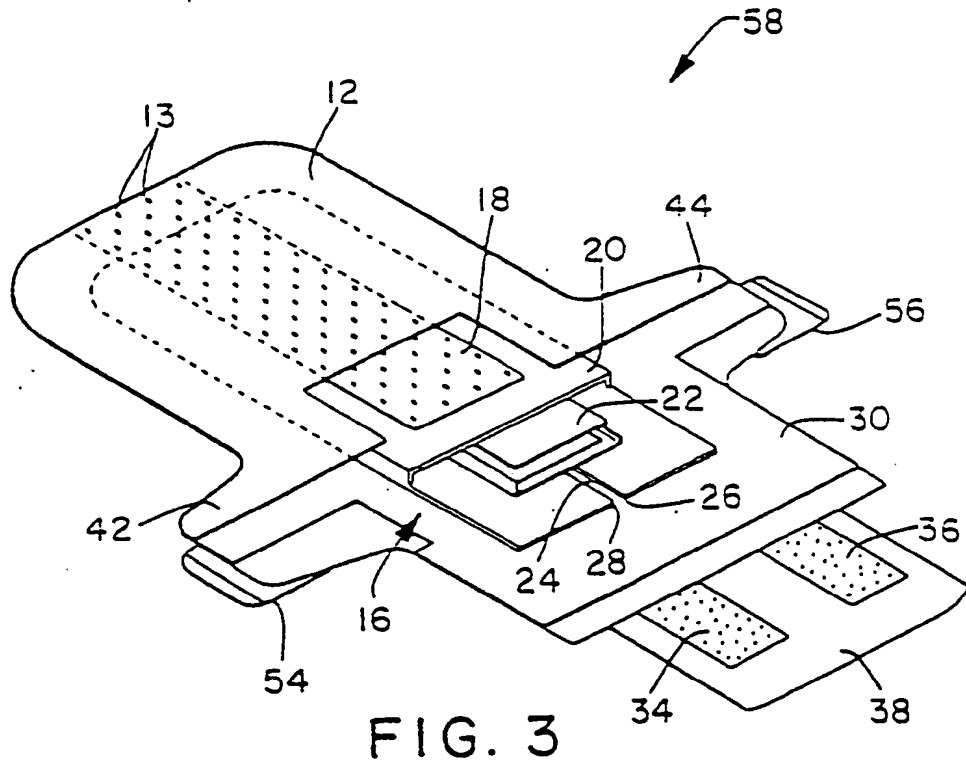

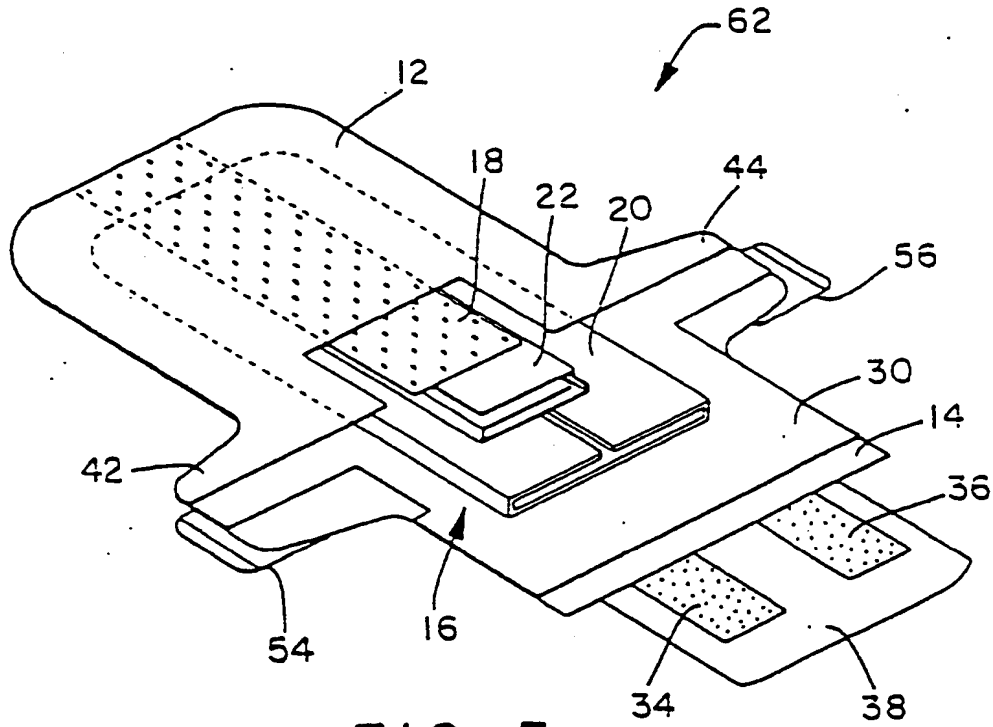


FIG. 5

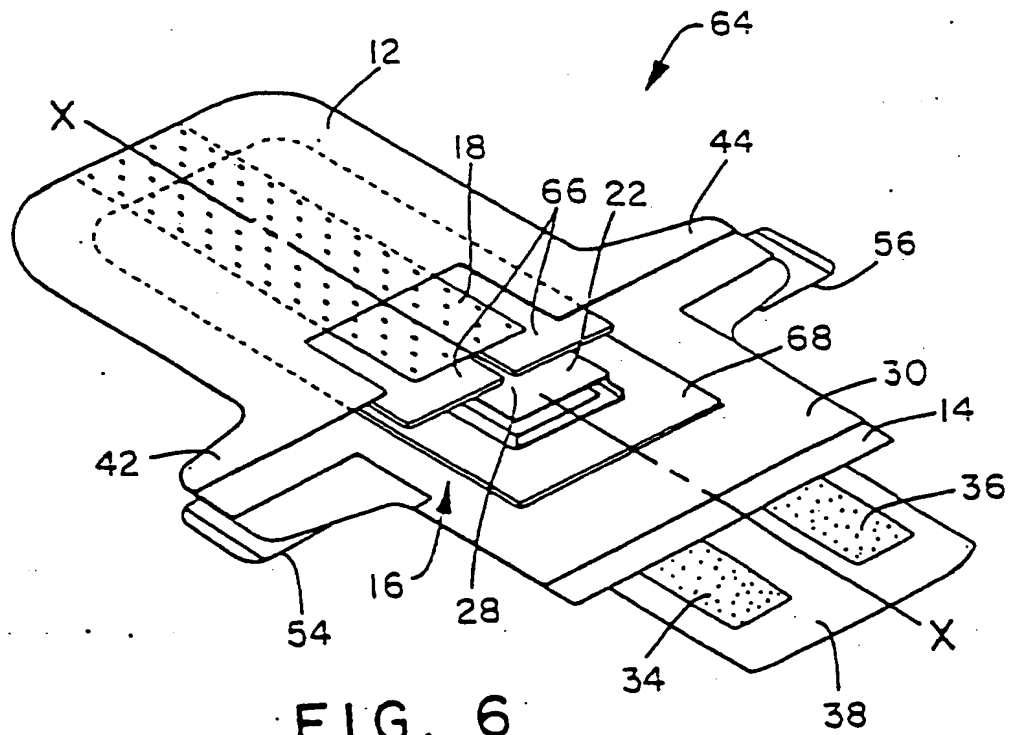


FIG. 6





European Patent  
Office

## EUROPEAN SEARCH REPORT

Application Number  
EP 01 12 2027

DOCUMENTS CONSIDERED TO BE RELEVANT			
Category	Citation of document with indication, where appropriate, of relevant passages	Relevant to claim	CLASSIFICATION OF THE APPLICATION (Int.Cl.7)
X	GB 2 168 612 A (SMITH AND NEPHEW ASSOCIATED COMPANIES PLC) 25 June 1986 (1986-06-25) * the whole document *	1-13	A61F13/15 A61F13/46
X	WO 93 01780 A (THE PROCTER & GAMBLE COMPANY) 4 February 1993 (1993-02-04) * the whole document *	1-13	
X	US 5 037 409 A (CHEN ET AL.) 6 August 1991 (1991-08-06) * the whole document *	1-13	
X	EP 0 471 114 A (KIMBERLEY-CLARK CORPORATION) 19 February 1992 (1992-02-19) * the whole document *	1-13	
X	EP 0 401 189 A (MÖLNLYCKE AB) 5 December 1990 (1990-12-05) * the whole document *	1-13	
X	US 4 195 634 A (DISALVO ET AL.) 1 April 1980 (1980-04-01) * the whole document *	1-13	TECHNICAL FIELDS SEARCHED (Int.Cl.7) A61F
X	EP 0 298 348 A (KIMBERLEY-CLARK CORPORATION) 11 January 1989 (1989-01-11) * the whole document *	1-13	
X	EP 0 316 771 A (KIMBERLEY-CLARK CORPORATION) 24 May 1989 (1989-05-24) * the whole document *	1-13	
X	WO 91 14415 A (MÖLNLYCKE AB) 3 October 1991 (1991-10-03) * the whole document *	1-13	
-/-			
The present search report has been drawn up for all claims			
Place of search <b>THE HAGUE</b>		Date of completion of the search <b>22 October 2001</b>	Examiner <b>Mirza, A</b>
CATEGORY OF CITED DOCUMENTS X : particularly relevant if taken alone Y : particularly relevant if combined with another document of the same category A : technological background O : non-written disclosure P : intermediate document T : theory or principle underlying the invention E : earlier patent document, but published on, or after the filing date D : document cited in the application L : document cited for other reasons & : member of the same patent family, corresponding document			

EPO FORM 1503 03 02 (P04C01)



European Patent  
Office

# EUROPEAN SEARCH REPORT

Application Number  
EP 01 12 2027

DOCUMENTS CONSIDERED TO BE RELEVANT			
Category	Citation of document with indication, where appropriate, of relevant passages	Relevant to claim	CLASSIFICATION OF THE APPLICATION (Int.Cl.7)
P, X	EP 0 548 714 A (KIMBERLEY-CLARK CORPORATION) 30 June 1993 (1993-06-30) * the whole document *	1-13	
			TECHNICAL FIELDS SEARCHED (Int.Cl.7)
The present search report has been drawn up for all claims			
Place of search <b>THE HAGUE</b>		Date of completion of the search <b>22 October 2001</b>	Examiner <b>Mirza, A</b>
<p><b>CATEGORY OF CITED DOCUMENTS</b></p> <p>X : particularly relevant if taken alone Y : particularly relevant if combined with another document of the same category A : technological background O : non-written disclosure P : intermediate document</p> <p>T : theory or principle underlying the invention E : earlier patent document, but published on, or after the filing date D : document cited in the application L : document cited for other reasons &amp; : member of the same patent family, corresponding document</p>			

EPO FORM 1503 to 82 (P042011)

**ANNEX TO THE EUROPEAN SEARCH REPORT  
ON EUROPEAN PATENT APPLICATION NO.**

EP 01 12 2027

This annex lists the patent family members relating to the patent documents cited in the above-mentioned European search report. The members are as contained in the European Patent Office EDP file on. The European Patent Office is in no way liable for these particulars which are merely given for the purpose of information.

22-10-2001

Patent document cited in search report		Publication date	Patent family member(s)	Publication date
GB 2168612	A	25-06-1986	NONE	
WO 9301780	A	04-02-1993	US 5334176 A	02-08-1994
			AT 150958 T	15-04-1997
			AT 142467 T	15-09-1996
			AT 143247 T	15-10-1996
			AT 148831 T	15-02-1997
			AT 174208 T	15-12-1998
			AT 155032 T	15-07-1997
			AT 142468 T	15-09-1996
			AT 149823 T	15-03-1997
			AU 2348192 A	23-02-1993
			AU 663104 B2	28-09-1995
			AU 2374292 A	23-02-1993
			AU 2383092 A	23-02-1993
			AU 2383192 A	23-02-1993
			AU 2399392 A	23-02-1993
			AU 662350 B2	31-08-1995
			AU 2402592 A	23-02-1993
			AU 662757 B2	14-09-1995
			AU 2420492 A	23-02-1993
			AU 2421392 A	23-02-1993
			AU 2507595 A	14-09-1995
			AU 2507695 A	14-09-1995
			AU 4021895 A	29-02-1996
			AU 4021995 A	29-02-1996
			AU 5844198 A	04-06-1998
			AU 735795 B2	12-07-2001
			AU 5951498 A	01-10-1998
			AU 5954298 A	01-10-1998
			AU 696823 B2	17-09-1998
			AU 6067196 A	03-10-1996
			AU 8189298 A	15-10-1998
			AU 8307898 A	24-12-1998
			BR 9205320 A	05-04-1994
			BR 9205329 A	05-10-1993
			BR 9205330 A	16-11-1993
			BR 9205346 A	16-11-1993
			BR 9206308 A	02-08-1994
			CA 2073849 A1	24-01-1993
			CA 2092196 A1	24-01-1993
			CA 2092197 A1	24-01-1993
			CA 2092198 A1	24-01-1993
			CA 2092199 A1	24-01-1993
			CA 2092202 A1	24-01-1993
			CA 2092203 A1	24-01-1993

EPO FORM P0456

For more details about this annex : see Official Journal of the European Patent Office, No. 12/82

**ANNEX TO THE EUROPEAN SEARCH REPORT  
ON EUROPEAN PATENT APPLICATION NO.**

EP 01 12 2027

This annex lists the patent family members relating to the patent documents cited in the above-mentioned European search report. The members are as contained in the European Patent Office EDP file on  
The European Patent Office is in no way liable for these particulars which are merely given for the purpose of information.

22-10-2001

Patent document cited in search report		Publication date	Patent family member(s)	Publication date
WO 9301780	A		CA 2092204 A1	24-01-1993
			CA 2113343 A1	24-01-1993
			CA 2195690 A1	24-01-1993
			CA 2243039 A1	24-01-1993
			CA 2243049 A1	24-01-1993
			CA 2243053 A1	24-01-1993
US 5037409	A	06-08-1991	AU 638849 B2	08-07-1993
			AU 8029591 A	16-01-1992
			CA 2046117 A1	13-01-1992
			DE 69113562 D1	09-11-1995
			DE 69113562 T2	21-03-1996
			EP 0470392 A1	12-02-1992
			ES 2077731 T3	01-12-1995
			KR 168642 B1	15-01-1999
			MX 9100188 A1	28-02-1992
			ZA 9104979 A	29-04-1992
EP 0471114	A	19-02-1992	AU 635094 B2	11-03-1993
			AU 6773990 A	23-01-1992
			BR 9006612 A	01-10-1991
			CA 2024558 A1	20-01-1992
			DE 69125545 D1	15-05-1997
			DE 69125545 T2	17-07-1997
			EP 0471114 A2	19-02-1992
			JP 5095973 A	20-04-1993
			KR 173679 B1	20-03-1999
			US 5248309 A	28-09-1993
			ZA 9010011 A	30-10-1991
EP 0401189	A	05-12-1990	SE 463747 B	21-01-1991
			AT 91876 T	15-08-1993
			AT 135903 T	15-04-1996
			AU 630713 B2	05-11-1992
			AU 5837590 A	07-01-1991
			CA 2055605 A1	01-12-1990
			DE 69002403 D1	02-09-1993
			DE 69002403 T2	11-11-1993
			DE 69026277 D1	02-05-1996
			DE 69026277 T2	22-08-1996
			DK 401189 T4	04-11-1996
			DK 558889 T3	20-05-1996
			EP 0401189 A1	05-12-1990
			EP 0558889 A1	08-09-1993
			ES 2042269 T3	01-12-1993
			ES 2085056 T3	16-05-1996

EPO FORM P/489

For more details about this annex : see Official Journal of the European Patent Office, No. 12/82

**ANNEX TO THE EUROPEAN SEARCH REPORT  
ON EUROPEAN PATENT APPLICATION NO.**

EP 01 12 2027

This annex lists the patent family members relating to the patent documents cited in the above-mentioned European search report. The members are as contained in the European Patent Office EDP file on  
The European Patent Office is in no way liable for these particulars which are merely given for the purpose of information.

22-10-2001

Patent document cited in search report	Publication date	Patent family member(s)	Publication date
EP 0401189 A		FI 100298 B1	14-11-1997
		GR 3019463 T3	30-06-1996
		GR 3020762 T3	30-11-1996
		GR 3033027 T3	31-08-2000
		HU 209364 B	30-05-1994
		JP 2967207 B2	25-10-1999
		JP 4506305 T	05-11-1992
		NO 178422 B	18-12-1995
		SE 8901964 A	01-12-1990
		WO 9014815 A1	13-12-1990
US 4195634 A	01-04-1980	CA 1136801 A1	07-12-1982
EP 0298348 A	11-01-1989	US 4865597 A	12-09-1989
		CA 1315487 A1	06-04-1993
		EP 0298348 A1	11-01-1989
		US 4886513 A	12-12-1989
EP 0316771 A	24-05-1989	AT 125684 T	15-08-1995
		AU 2561388 A	25-05-1989
		AU 630763 B2	05-11-1992
		AU 6599790 A	24-01-1991
		CA 1306081 A1	11-08-1992
		DE 3854257 D1	07-09-1995
		DE 3854257 T2	04-01-1996
		EP 0316771 A2	24-05-1989
		ES 2075834 T3	16-10-1995
		JP 2001268 A	05-01-1990
		JP 2901256 B2	07-06-1999
		KR 9707092 B1	02-05-1997
		MX 173803 B	29-03-1994
		TR 28030 A	11-12-1995
		US 4973325 A	27-11-1990
WO 9114415 A	03-10-1991	SE 501146 C2	28-11-1994
		AT 118337 T	15-03-1995
		AU 648549 B2	28-04-1994
		AU 7564991 A	21-10-1991
		CA 2077915 A1	27-09-1991
		DE 69107451 D1	23-03-1995
		DE 69107451 T2	14-06-1995
		DK 523107 T3	01-05-1995
		EP 0523107 A1	20-01-1993
		ES 2067929 T3	01-04-1995
		FI 924299 A	25-09-1992
		GR 3015281 T3	30-06-1995

EPO FORM P0469

For more details about this annex : see Official Journal of the European Patent Office, No. 12/82

**ANNEX TO THE EUROPEAN SEARCH REPORT  
ON EUROPEAN PATENT APPLICATION NO.**

EP 01 12 2027

This annex lists the patent family members relating to the patent documents cited in the above-mentioned European search report. The members are as contained in the European Patent Office EDP file on  
The European Patent Office is in no way liable for these particulars which are merely given for the purpose of information.

22-10-2001

Patent document cited in search report	Publication date	Patent family member(s)	Publication date
WO 9114415 A		HU 64827 A2	28-03-1994
		JP 5505122 T	05-08-1993
		JP 3192140 B2	23-07-2001
		NO 180515 B	27-01-1997
		SE 9001092 A	27-09-1991
		WO 9114415 A1	03-10-1991
		US 5423787 A	13-06-1995
EP 0548714 A	30-06-1993	US 5219341 A	15-06-1993
		AU 656043 B2	19-01-1995
		AU 2996992 A	24-06-1993
		CA 2074055 A1	21-06-1993
		DE 69224972 D1	07-05-1998
		DE 69224972 T2	19-11-1998
		EP 0548714 A2	30-06-1993
		ES 2113913 T3	16-05-1998
		HK 1014488 A1	03-11-2000
		JP 5261129 A	12-10-1993
		KR 236744 B1	01-05-2000
		MX 9206147 A1	01-06-1993
		US 5807362 A	15-09-1998
		ZA 9208908 A	18-05-1993

EPO FORM P0119

For more details about this annex : see Official Journal of the European Patent Office, No. 12/82